

busbar	item	fuse	nominal_load	preflight	start	taxi_out	climb	cruise	descent	taxi_in	alternator fail	engine fail
Direct	Trim servo	1.00	0.22	0.22	0.00	0.22	0.22	0.22	0.22	0.22	0.22	0.22
	Starter motor		50.00	0.00	50.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
Direct totals			50.22	0.22	50.00	0.22	0.22	0.22	0.22	0.22	0.22	0.22
Grand totals (NB Alternator max output 22A)			62.19	0.49	52.66	9.69	11.19	10.69	11.19	9.69	7.55	9.69